





Use of dominoes

Place the (+) pilot cable (yellow wire) and the band cable (red wire) in the domino :



1st possibility

2nd possibility (yellow wire not cut)

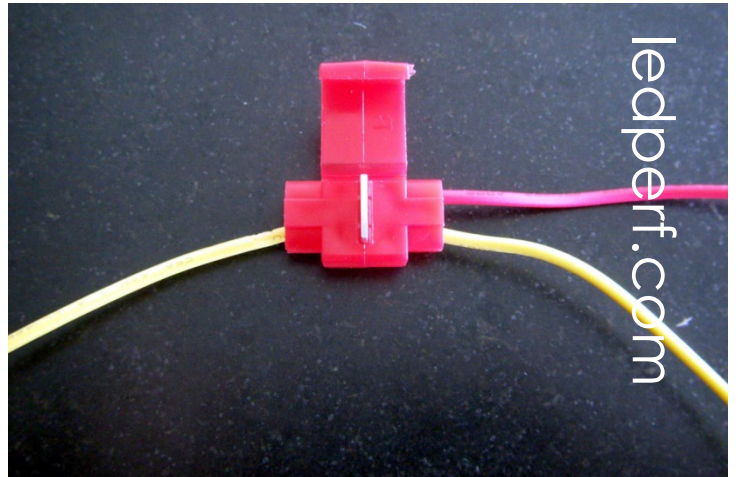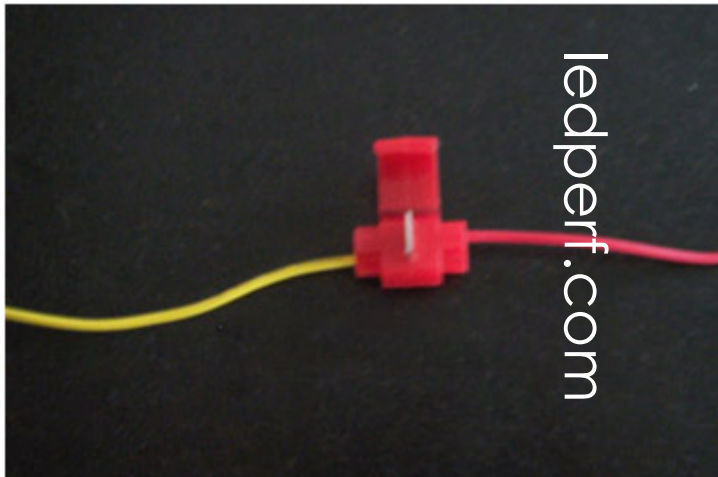



Pilot cable in one hole

Band cable in the other hole

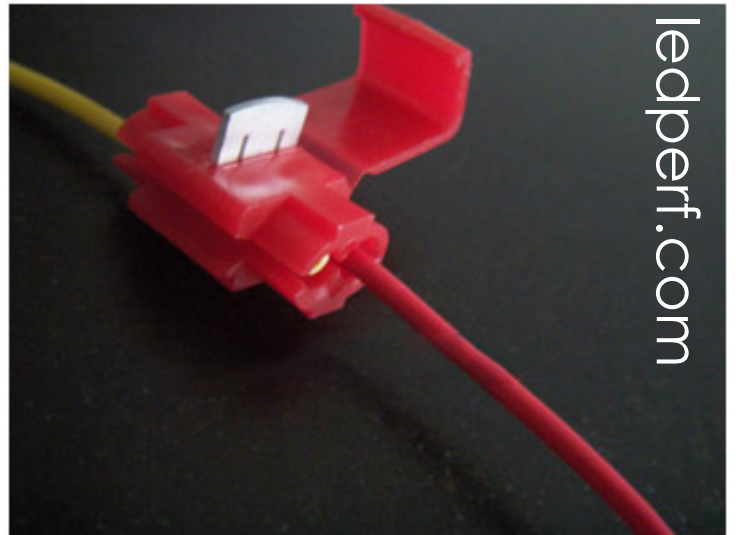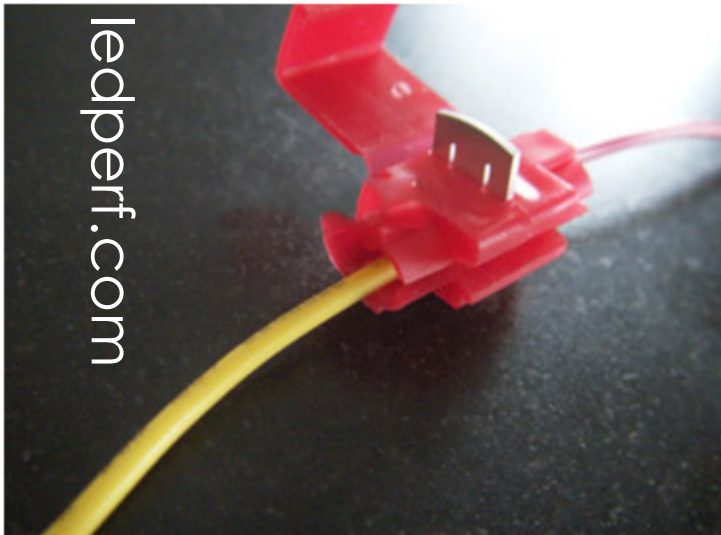

Then lower the metal

part and close the cap

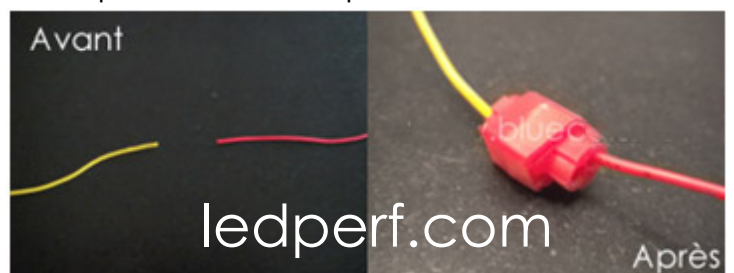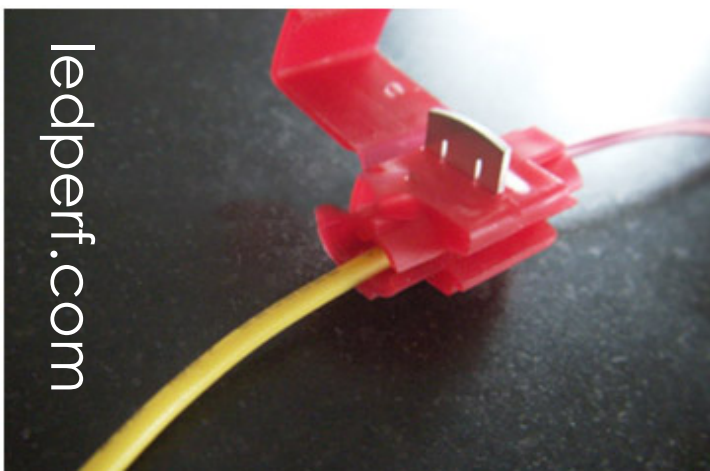

Caution: Use **one domino for each cable** of the tape. For each band, there are 2 dominoes to use because there is a cable (+), and a cable (-).